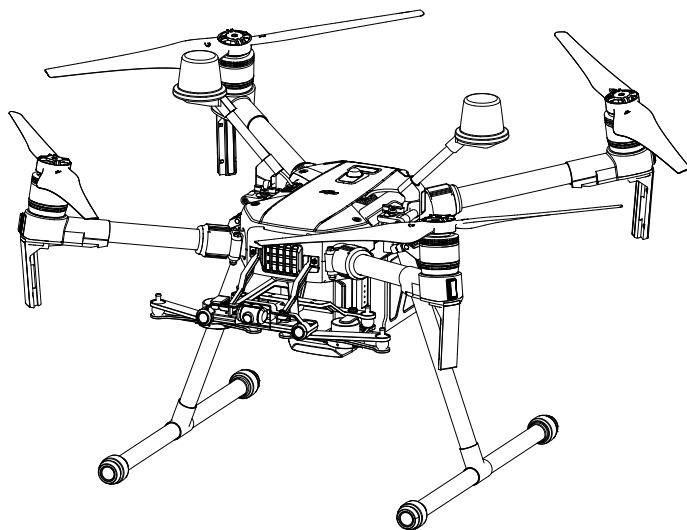


MATRICE 200 Series V2

Maintenance Manual v1.0

2020.08



Searching for Keywords

Search for keywords such as "battery" and "install" to find a topic. If you are using Adobe Acrobat Reader to read this document, press Ctrl+F on Windows or Command+F on Mac to begin a search.

Navigating to a Topic

View a complete list of topics in the table of contents. Click on a topic to navigate to that section.

Printing this Document

This document supports high resolution printing.

Contents

Introduction	4
Disclaimer	4
Safety Guidelines	4
Flight Condition Requirements	4
Storage and Transportation	5
Firmware Updates	5
Inspection and Maintenance	5
Routine Inspection	5
Regular Maintenance	8
After-Sales Service	16
Warranty Policy	16
Repair Channel	16
Appendix	17
Maintenance Record	17

Introduction

This Maintenance Manual offers guidelines to help you in the daily upkeep and maintenance of your aircraft. A record table is also included to help you keep track of the maintenance records throughout the product lifecycle.

This document will focus on the maintenance instructions and the notes, cautions, and warnings during use. Read the User Manual and Maintenance Manual carefully to optimize your user experience. If you have any questions on the maintenance operations, please contact DJI Support.

Disclaimer

Carefully read this entire document and all safe and lawful practices provided by DJI™ before using this product for the first time. Failure to read and follow instructions and warnings may result in serious injury to yourself or others, damage to your DJI product, or damage to other objects in the vicinity. By using this product, you hereby signify that you have read this disclaimer carefully and that you understand and agree to abide by all terms and conditions of this document and all relevant documents of this product. You agree to use this product only for purposes that are proper. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. DJI accepts no liability for damage, injury, or any legal responsibility incurred directly or indirectly from the use of this product.

DJI is a trademark of SZ DJI TECHNOLOGY CO., LTD. and its affiliated companies. Names of products, brands, etc., appearing in this document are trademarks or registered trademarks of their respective owner companies. This product and document are copyrighted by DJI with all rights reserved. No part of this product or document shall be reproduced in any form without the prior written consent of or authorization from DJI.

This disclaimer is available in various languages. In the event of divergence among different versions, the English version shall prevail. The final interpretation of this document and all related documents of this product belongs to DJI. This content is subject to change without prior notice. For up to date product information, visit <http://www.dji.com> and click on the product page for this product.

Safety Guidelines

Flight Condition Requirements

Operational Requirements

Before use, read the Disclaimer and Safety Guidelines, User Manual, and Maintenance Manual carefully.

Flight Restrictions

1. Please connect your aircraft to the internet to update the database of DJI GEO Zones regularly. Consult the relevant local government agencies or governing bodies before flight to ensure you comply with all the relevant laws and regulations.
2. If flying in GEO Zones is required, apply for unlocking in advance.
<https://www.dji.com/flysafe>

Storage and Transportation

There are safety requirements for the storage and transportation of the Intelligent Flight Batteries. Please strictly follow these Intelligent Flight Battery Safety Guidelines.

Firmware Updates

To optimize your experience, it is recommended to keep the firmware of the aircraft and remote controller up to date before each flight. Refer to the User Manual for instructions on running a firmware update. If the firmware update fails, restart the device and retry. If the problem persists, please contact DJI Support.

Inspection and Maintenance

Routine inspection before and after operations or regular maintenance can greatly improve the aircraft's reliability, reduce potential safety hazards, and extend its service life.

Routine Inspection

Make sure to check the following before each flight.

Checklist When Powered Off

Type	Essentials
Structure	<ol style="list-style-type: none"> 1. Visually inspect and use your fingers to feel the propellers, frame arms, arm junctions, and landing gears to check if they are in good condition. If there are any cracks or damage, replace the component immediately. If there are any foreign objects on the propellers, clear them before use. 2. The screws for all the connection structures are securely tightened, especially those for the arm junctions, landing gear junctions and landing gear lockers. 3. The waterproof rear port cover (while the rear port is not in use), RTK rubber covers or upper shell rubber cover are in place. 4. The battery release button works normally.
Motors	<ol style="list-style-type: none"> 1. The propellers are not visibly deformed, damaged, aged or softened. If they are, replace the propellers immediately. 2. Rotate the motors manually to check if they are firmly installed without a gap between the motors and the motor base and the motors rotate smoothly without noise. 3. Propellers are mounted correctly. CCW propellers should be on motors 1 and 3, and CW propellers should be on motors 2 and 4. (The front-facing propeller on the right is motor 1, with motor 2, 3, and 4 arranged in a counter-clockwise order.) 4. Refer to the propulsion system section in the Regular Maintenance Items.
Batteries	<ol style="list-style-type: none"> 1. There is no foreign object in the battery ports on the aircraft and the ports are not misshapen. 2. The battery is secure to ensure that it does not come loose during flight. 3. The battery shell has no visible damage. If it does, DO NOT use the battery for flight.

Antennas	<ol style="list-style-type: none"> 1. All the SDR, GPS/RTK antennas on the aircraft and remote controller are tightened firmly and free of damage. They are in a place that will give the propellers proper clearance.
Gimbal (Payload)	<ol style="list-style-type: none"> 1. The gimbal appears intact and can rotate smoothly in all the three axes. 2. The lens is clean.
Other Payload (If applicable or available)	<ol style="list-style-type: none"> 1. There is no blockage. The shell of the payload has no damage. The mounting bracket is secure and in good condition.
Remote Controller	<ol style="list-style-type: none"> 1. The control sticks are centered in neutral position, with no foreign object such as sand and soil, and can smoothly reach full ranges of motion in all channels. 2. The screen on the remote controller is clean and dry.
Damping Plate	<ol style="list-style-type: none"> 1. The dampeners are not damaged. The damping plate has no crack or split. The gimbal connector is secure and cannot be rotated in the opposite direction after the gimbal is installed.
Infrared Sensing and Vision Systems	<ol style="list-style-type: none"> 1. There is no blockage in the working range of the Infrared Sensing and Vision Systems and auxiliary lights, especially when using a non-DJI payload or accessory. 2. Check the lenses or glass of the Infrared Sensing and Vision Systems and auxiliary lights. <ol style="list-style-type: none"> a. Make sure there are no stickers or any other obstructions over the Infrared Sensing and Vision Systems. b. Clean the lenses and glass with a dust-free cloth if there is any moisture, fingerprint, or dirt. c. Contact DJI Support if there is any damage to the lenses of the Infrared Sensing and Vision Systems.
Emergency Supplies	<ol style="list-style-type: none"> 1. Spare USB-C cables 2. Two pairs of spare landing gears 3. Two pairs each of spare CW and CCW propellers 4. Spare microSD cards 5. Screwdrivers, screws of all types used, cable ties, tape, a dry and soft cloth 6. A multimeter 7. A case to store emergency supplies

Checklist When Powered On

Type	Essentials
Remote Controller	<ol style="list-style-type: none"> 1. Confirm the control stick mode (Mode 1/2/3), and check in the control stick calibration page in the app if the proportion of the control lever is correct. 2. The remote controller has sufficient power and the battery is firmly installed. 3. Confirm that the channel used is automatic or custom, and then choose the operation frequency and channel according to the signal to noise ratio.

<p>Battery</p>	<ol style="list-style-type: none"> 1. All batteries, including Intelligent Flight Batteries and remote controller batteries, are fully charged. 2. It is recommended to charge and discharge the battery by following the standard instructions before flight if the battery is stored for a period longer than one month. 3. The Intelligent Flight Batteries are firmly installed. 4. Check the battery level and voltage of each battery cell in the battery page in the app to make sure they are normal.
<p>Flight Parameters Configuration</p>	<ol style="list-style-type: none"> 1. The Failsafe action of the aircraft is what fits your mission needs. For example, the aircraft will land as a failsafe within in 50 m of the Home Point, and it will hover as a failsafe when it is within in 200 m from the Home Point. 2. The flight mode switch is set up correctly. 3. RTH altitude, height limits, distance limits, and obstacle sensing function are set up correctly.
<p>Module Auto-Check</p>	<ol style="list-style-type: none"> 1. View the module auto-check information on top of the screen in the app to check if there is any error prompt.
<p>GNSS Positioning</p>	<ol style="list-style-type: none"> 1. There are at least 7 satellites and the aircraft works in P-mode. 2. Enable RTK function, select the correct base station and channel, and make sure that RTK positioning is in use. Check in the RTK page if the heading and positioning are fixed.
<p>Sensors</p>	<ol style="list-style-type: none"> 1. Data on each IMU is shown in the app. IMU calibration can be performed successfully. 2. Data on each compass is shown in the app. The heading of the compass matches the physical one, and the needle is stable. 3. Compass calibration can be performed successfully. 4. The Vision System in all directions are enabled and there is no error prompt.
<p>Top and Bottom Cooling Fans</p>	<ol style="list-style-type: none"> 1. Touch the shell of the cooling fans or listen carefully to check if the cooling fans work normally without noise.
<p>Firmware Consistency</p>	<ol style="list-style-type: none"> 1. Connect the remote controller to the internet, then launch the app. Make sure that the app and the firmware versions of the aircraft, remote controller, payloads, and batteries match. Otherwise, the aircraft cannot take off or there may be risks. 2. Insert all Intelligent Flight Batteries into the aircraft to make sure that all of their firmware versions are up to date.
<p>Motor Spin</p>	<p>Link the remote controller and aircraft, make sure the FPV camera display in the app works normally, and then perform Combination Stick Command (CSC) to start the motors in a safe indoor area to make the motors spin at an idle speed. Then test the following. NOTE: Stay away from the spinning motors and propellers to avoid injuries during the test.</p> <ol style="list-style-type: none"> 1. The motors start without noise. There is no error prompt in the app. 2. At the beginning when the motors start or the end when the motors stop, observe the motors to make sure that motors 1 and 3 rotate counter-clockwise while motors 2 and 4 rotate clockwise.

Flight Test Checklist

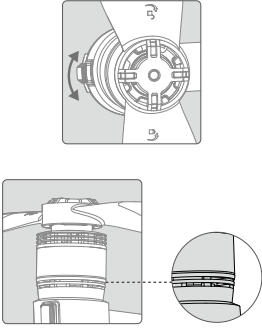
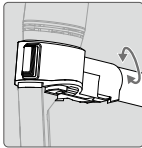
Type	Essentials
Flight Test	<ol style="list-style-type: none"> 1. Make sure that there are no potential safety hazards or people within 5 m of the aircraft. 2. Make sure that the satellite count is more than 10 and there is sufficient light. Start video recording. 3. In P-mode, perform CSC to make the motors spin at an idle speed on the ground. Push the control sticks in each direction lightly to test. Then push the throttle stick down to the bottom until the motors stop. 4. In P-mode, perform CSC to make the motors spin at an idle speed on the ground. Observe to check if the aircraft shakes. Then push the throttle stick down to the bottom until the motors stop. 5. In P-mode, take off and then hover at a height of 5 m for 1 min. Check to see the aircraft horizontal drift is no more than 1 m and the height drift is no more than 0.5 m. Check the shake of the aircraft, battery status, sound of the motors and propellers. 6. Push the control sticks in each direction lightly to check if the aircraft responds correctly. 7. Gradually increase the movement of the control sticks to observe the attitude response and the shake of the aircraft when braking. 8. Set height limits and distance limits. Then test if the aircraft can obey the limits. 9. In P-mode, enable obstacle sensing. Then test if the aircraft can avoid obstacles in front, and upward directions. 10. In P-mode, fly the aircraft more than 20 m away from the Home Point at an altitude less than the preset RTH altitude. Initiate RTH using the RTH button on the remote controller to test if the aircraft can perform ascending, cruising, landing in order and the landing position has an error no more than 1 m from the Home Point. 11. Stop video recording after landing. 12. Once high-value payload is used, perform the flight test without payload first, make sure that the aircraft is ready for use. And then mount the payload to perform the flight test again.
Checklist after Landing	<ol style="list-style-type: none"> 1. The propellers, motors, and aircraft body are intact, and there is no sign for collision or loose or broken structures. 2. The temperature of the motors is normal, no signs of uneven heating.

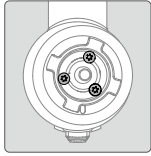
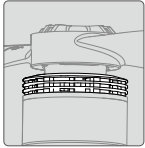

Regular Maintenance

Make sure to perform inspection and maintenance regularly by following the standards below to keep the aircraft in a good condition and reduce safety risks.

Regular Maintenance Items

Propulsion System

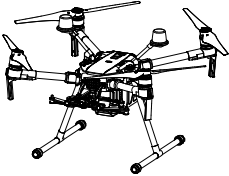
Type	Inspection Process and Solutions	Illustrations
<p>Motor Rotation</p>	<ol style="list-style-type: none"> 1. Unfold and secure the frame arms. 2. Rotate the rotor of the motor to check if there is any blockage or rubbing. Observe the gap between the rotor and stator of the motor to check if there is any rubbing with the motor base. 3. DO NOT fly the aircraft if there is any blockage or rubbing mentioned above. It is necessary to return to the factory for repair. 	
<p>Connection between Motor and Arm</p>	<ol style="list-style-type: none"> 1. Check if the motor base is damaged, the motor and carbon tube connection is loose. 2. If there is any damage, return to the factory for repair. 	

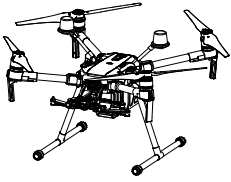
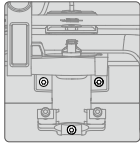
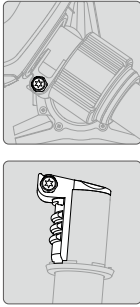
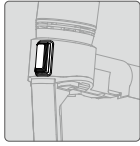
<p>Motor Upper Cover</p>	<ol style="list-style-type: none"> 1. Ensure that the screws on the upper cover are not loose. There is no damage or crack on the quick-release propeller base. 2. If the quick-release propeller base is damaged or cracked, return to the factory for repair. 	
<p>Motor Air Filters</p>	<ol style="list-style-type: none"> 1. Ensure that Air filters are not damaged. 2. If they are damaged, return to the factory for repair. 	
<p>Propellers</p>	<ol style="list-style-type: none"> 1. Check the propellers for visible deformation, severe wear, nicks, and cracks, and if there are any foreign materials. 2. There are no foreign materials. 3. Clean the propellers with a dry soft cloth. 4. Replace the propellers immediately if visible deformation, severe wear, nicks, or cracks occur. 	

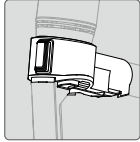
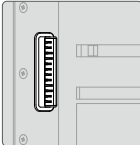
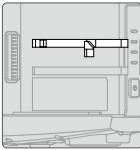
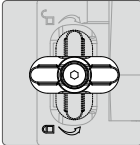

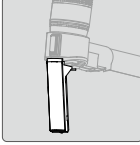
Flight Controller

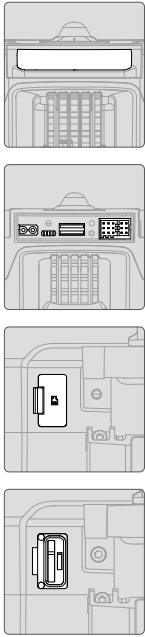
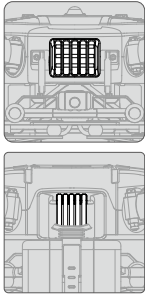
1. After the aircraft is powered on and self-check is complete, there are no error prompts in the app related to the flight controller.
2. In outdoor open environments, GPS signal has four bars within 1 min after powering on the aircraft, which indicates that the Home Point can be recorded automatically, and the RTK data meets the heading measurement standard.
3. In outdoor open environments, the interference of the compass after calibration is less than 50.
4. Sensor bias is less than 0.05 after IMU calibration.

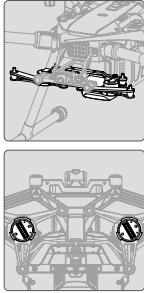
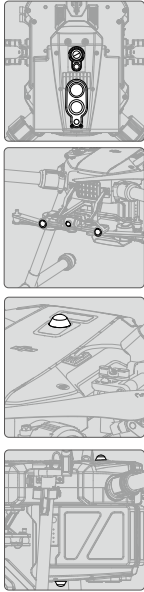
Aircraft Structure

Type	Inspection Process and Solutions	Illustrations
<p>Aircraft Appearance</p>	<ol style="list-style-type: none"> 1. The aircraft body is clean and not damaged. 2. Clean the aircraft body with a clean and soft cloth, especially for the lenses of the Infrared Sensing and Vision Systems and the heat dissipation vents. 	

<p>Screws</p>	<ol style="list-style-type: none"> 1. All the screws on the aircraft body are tightened, especially the screws connecting the motor and the carbon tube. 	
<p>Landing Gear Base</p>	<ol style="list-style-type: none"> 1. Detach the landing gear to check the three screws as shown. There is no damage or crack around the screws. 2. If there is any screw loose, remove it to clear the remained glue on it, apply some LOCTITE 263 glue and attach it again. 3. Recommended torque: 40~60N. (a manual screwdriver is also suitable) 4. Inspection method: move the lock to see the screw is not loose, and that the landing gear can be disassembled and installed as per normal. 5. Follow the above steps to maintain and inspect the other Landing Gear Base. 	
<p>Frame Arms</p>	<ol style="list-style-type: none"> 1. Ensure the screw is secure, as shown in the illustration. 2. Ensure that the arm junctions are not damaged or cracked. If there is any damage or crack, return to the factory for repair. 3. The arm sleeves can be tightened in place. 4. Ensure that the carbon tube and the arm shaft connector are tightly attached together. 	
<p>Frame Arm LEDs</p>	<ol style="list-style-type: none"> 1. There is no foreign object or damage on the surface. 	

<p>Motor Base</p>	<ol style="list-style-type: none"> 1. The motor bases are not damaged or cracked. 2. The motor base and the carbon tube are to be attached firmly. 	
<p>Battery Compartment</p>	<ol style="list-style-type: none"> 1. Ensure the battery port contactors are clean and dry without any corrosion. Also, there should be no trace of scorching. 2. Ensure that the battery release button functions normally, and the lock slider can move smoothly. 	 
<p>Antenna</p>	<ol style="list-style-type: none"> 1. Ensure that the RTK antenna knob screws are not loose. 2. The RTK antenna rubber plug and the wire must be tightly plugged and should not be damaged. 3. Ensure that the SDR antenna structure is not damaged or cracked, and there is no shaking. 	  

<p>Data Ports</p>	<ol style="list-style-type: none"> 1. Ensure the expansion port cover can be closed and opened normally. 2. The expansion ports must be clean without any foreign matter or objects. The cable connector can be plugged and unplugged from the port smoothly. 3. Ensure that the microSD card cover is not damaged or cracked, and can be closed normally. 4. Ensure that the microSD card can be plugged and unplugged from the port smoothly. 	
<p>Heat Dissipation Vents</p>	<ol style="list-style-type: none"> 1. There is no blockage in the heat dissipation vents. The cooling fans work smoothly without noise. 	

<p>Gimbal Damping Plate and Gimbal Damper</p>	<ol style="list-style-type: none"> 1. Ensure that the dampeners are not damaged, loose, or aged. 2. The gimbal connector should rotate smoothly. The surface must be clean without any foreign matter or dirt. 3. Ensure that the screws connecting the damping plate and aircraft body are secure. 	
<p>Infrared Sensing, Vision System and FPV Lenses, Ultrasonic Module, and Beacons</p>	<ol style="list-style-type: none"> 1. Ensure that all lenses and ultrasonic module surfaces have no dirt or cracks. 2. Ensure that lenses are not loose and have no cracks. 3. Ensure that the upper and bottom beacons are not loose and cracked. Also, they should be located on the aircraft body properly. 	

Battery and Charger

Battery Maintenance Conditions

Maintenance is required when any of the events below occur.

1. Every 50 cycles.
2. The battery is idle for more than three months.
3. There is a maintenance prompt in the app.

Checklist for Maintenance

1. Charge and discharge the battery as per instructions.

2. Make sure the cell voltage difference is less than 0.1 V after the battery is fully charged and left stationary for six hours.
3. Make sure the battery is not swollen, leaky, or damaged.
4. Make sure battery terminals are clean.
5. Make sure the battery firmware is updated to the latest version.

Standard Charge and Discharge Operation Instructions

1. Charge the battery to 100% and leave the battery stationary for more than 24 hours.
2. Install the battery into the aircraft before flight. If the remaining power level is less than 20%, land the aircraft and remove the battery.
3. Leave the battery stationary for more than six hours.
4. Charge the battery to 100% power level.
5. Repeat the above steps.

Battery Replacement Standard

1. The battery is visibly swollen, leaky, or damaged.
2. There is a prompt of battery cell damage or over discharge in the app.
3. The battery is rated for 200 cycles. It is not recommended to continue use afterward.
4. The battery error still exists after performing the standard charge and discharge operations twice continuously.

Battery Disposal

1. Fully fill in an insulated bucket with 5% salt solution. Put the battery into it for more than 48 hours to fully discharge the battery.
2. It is recommended to recycle the battery by a recycling agent to avoid environmental pollution.

Emergencies

1. Put out any battery fire using sand or a dry powder fire extinguisher.
2. Put the battery into 5% salt solution immediately if the battery shell has visible damage. DO NOT use the battery afterward.
3. If any electrolytes make contact with your skin, immediately wash the affected area with clean running water or alkaline hand sanitizer for at least 15 minutes. See a doctor immediately.

Warnings

1. It is recommended to charge and discharge the battery in a special explosion-proof cabinet.
2. DO NOT charge the battery near flammable materials, objects or on flammable surfaces.
3. DO NOT use the battery in a humid environment to avoid short circuit.
4. Never disassemble or pierce the battery in any way.
5. Store Intelligent Flight Batteries in a well-ventilated and dry place.
6. Initial RTH immediately when the battery temperature is 80° C (176° F) or higher.

Vision System Calibration

Vision System calibration is required when any of the events below occurs.

1. The total flight time is 200 hours.
2. There is a calibration prompt in the app.

Firmware Update

Make sure that firmware of the product and its relevant products are all up to date.

After-Sales Service

Warranty Policy

Please visit <https://www.dji.com/en/service/policy> to check the product warranty period and warranty policy.

Repair Channel

Please visit <https://repair.dji.com/repair/index> and submit an Online Repair Request following the instructions.

Appendix

Maintenance Record

Maintenance Record Table

Maintenance Date		Maintenance Items
Total Flight Time	(hours)	<input type="checkbox"/> Propulsion System <input type="checkbox"/> Flight Controller <input type="checkbox"/> Vision System Calibration <input type="checkbox"/> Batteries <input type="checkbox"/> Aircraft Body Structure <input type="checkbox"/> Firmware Update <input type="checkbox"/> Core Components Replacement <input type="checkbox"/> Component Replacement Due To Wear and Tear
Maintainer Signature		
Maintenance Date		Maintenance Items
Total Flight Time	(hours)	<input type="checkbox"/> Propulsion System <input type="checkbox"/> Flight Controller <input type="checkbox"/> Vision System Calibration <input type="checkbox"/> Batteries <input type="checkbox"/> Aircraft Body Structure <input type="checkbox"/> Firmware Update <input type="checkbox"/> Core Components Replacement <input type="checkbox"/> Component Replacement Due To Wear and Tear
Maintainer Signature		
Maintenance Date		Maintenance Items
Total Flight Time	(hours)	<input type="checkbox"/> Propulsion System <input type="checkbox"/> Flight Controller <input type="checkbox"/> Vision System Calibration <input type="checkbox"/> Batteries <input type="checkbox"/> Aircraft Body Structure <input type="checkbox"/> Firmware Update <input type="checkbox"/> Core Components Replacement <input type="checkbox"/> Component Replacement Due To Wear and Tear
Maintainer Signature		

Maintenance Record Table

Maintenance Date		Maintenance Items
Total Flight Time	(hours)	<input type="checkbox"/> Propulsion System <input type="checkbox"/> Flight Controller <input type="checkbox"/> Vision System Calibration <input type="checkbox"/> Batteries <input type="checkbox"/> Aircraft Body Structure <input type="checkbox"/> Firmware Update <input type="checkbox"/> Core Components Replacement <input type="checkbox"/> Component Replacement Due To Wear and Tear
Maintainer Signature		
Maintenance Date		Maintenance Items
Total Flight Time	(hours)	<input type="checkbox"/> Propulsion System <input type="checkbox"/> Flight Controller <input type="checkbox"/> Vision System Calibration <input type="checkbox"/> Batteries <input type="checkbox"/> Aircraft Body Structure <input type="checkbox"/> Firmware Update <input type="checkbox"/> Core Components Replacement <input type="checkbox"/> Component Replacement Due To Wear and Tear
Maintainer Signature		
Maintenance Date		Maintenance Items
Total Flight Time	(hours)	<input type="checkbox"/> Propulsion System <input type="checkbox"/> Flight Controller <input type="checkbox"/> Vision System Calibration <input type="checkbox"/> Batteries <input type="checkbox"/> Aircraft Body Structure <input type="checkbox"/> Firmware Update <input type="checkbox"/> Core Components Replacement <input type="checkbox"/> Component Replacement Due To Wear and Tear
Maintainer Signature		

DJI Support

<http://www.dji.com/support>

This content is subject to change without prior notice.

Download the latest version from

<https://www.dji.com/matrice-200-series-v2>

Copyright © 2020 DJI All Rights Reserved.